





## 116-KD / 119-KD ASSEMBLY INSTRUCTIONS

1. Insert the male base into the female top assembly as shown.

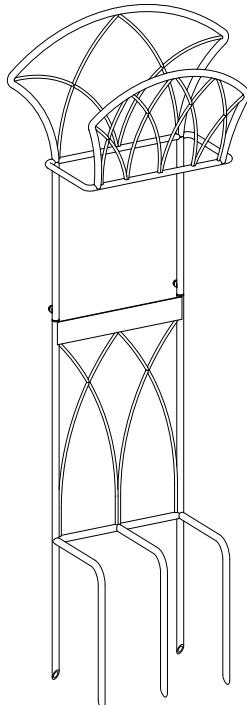

**116-KD**



2. Insert two supplied allen screws (A) into the threaded holes of the female top assembly.

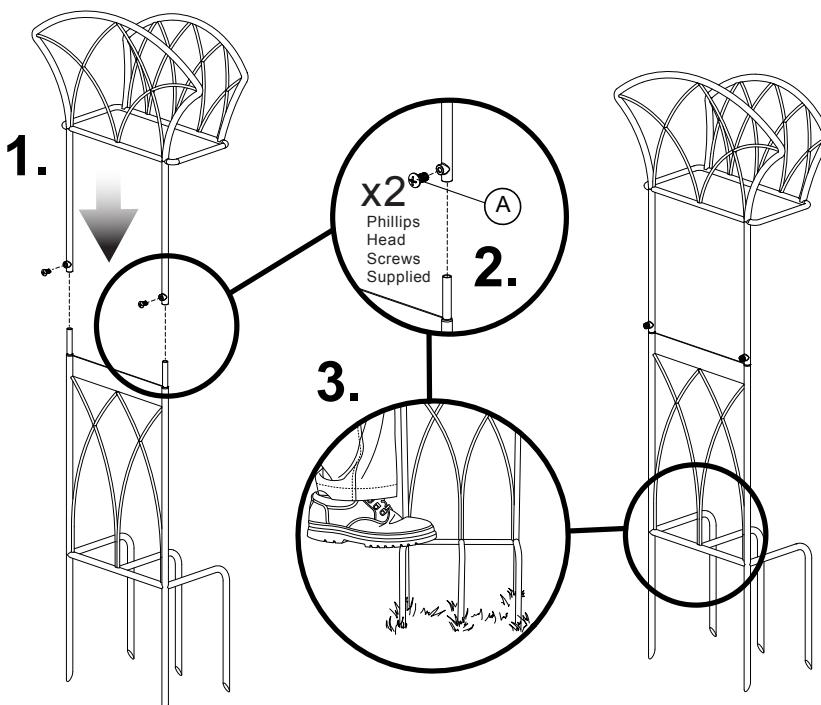

3. Step down on the single bar until desired depth is achieved.

**NOTE:** Do not over tighten Phillips Head screws

**DO NOT HAMMER** or beat unit into position this will damage the cross bar. In hard or rocky soils drill or dig hole depth and width as required. Water down to compact earth. Concrete may also be used for permanent placement.

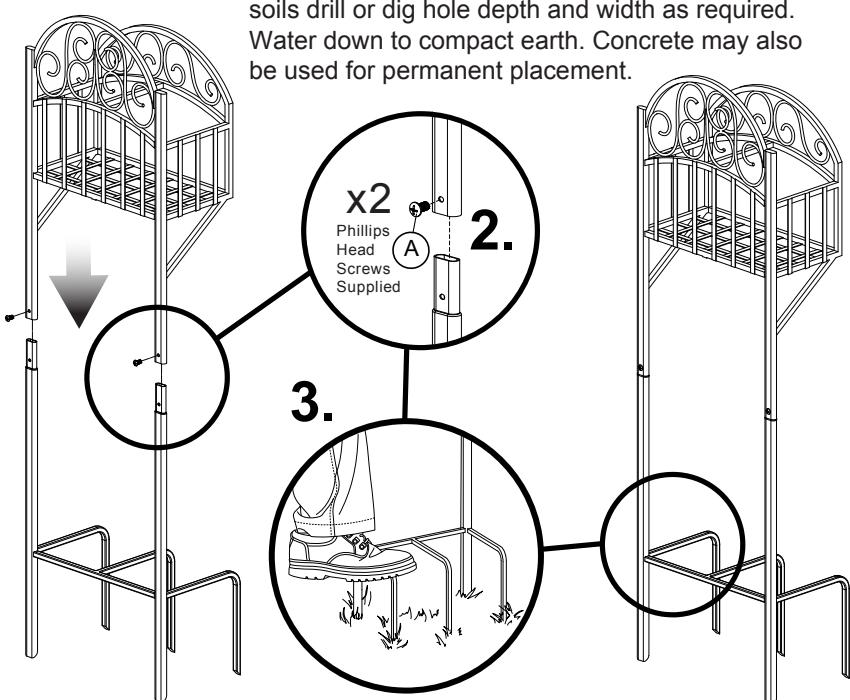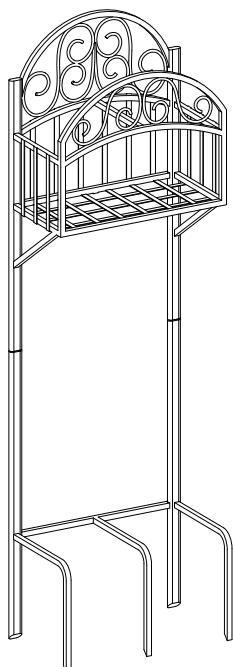

**IMPORTANT: READ THE INSTRUCTIONS BEFORE ASSEMBLING**