




Three Prong KD Hose Stands Assembly Instructions

Assembly Instructions:


1. Use Phillips Head Screwdriver and remove supplied Phillips Head screws. Insert the manger style top tube into the middle tube and align into the base tube.

2. Fasten the three pieces with screws into the two threaded holes securely using a Phillips Head Screwdriver.

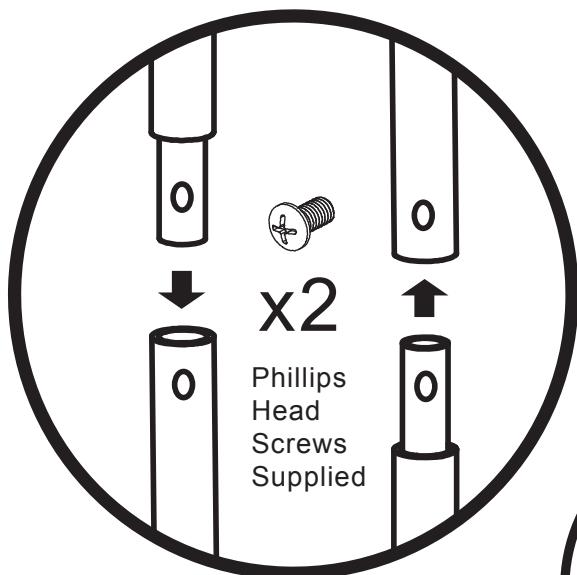


Note:


Do not overtighten Phillips Head Screws to avoid possible stripping.

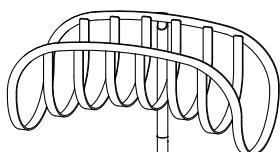

647-KD

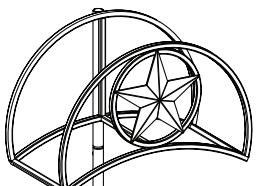


**122-KD
123-KD**

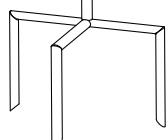

**125-KD
126-KD**

3. Step down on the three anchor points until desired depth is achieved.

DO NOT HAMMER to beat unit into position as this will damage the cross bars. In hard or rocky soil drill or dig hole depth and width as required. Water down to compact earth. Concrete may also be used for permanent placement.

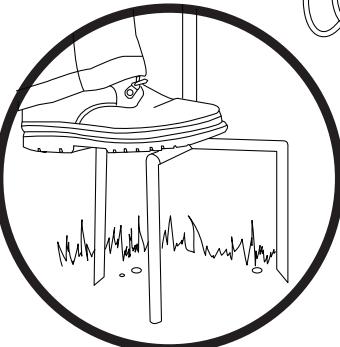

128-KD

FOR QUESTIONS CONTACT: CUSTOMERSERVICE@LIBERTYGARDENPRODUCTS.COM

LIBERTY GARDEN PRODUCTS, INC.

1161 SOUTH PARK DRIVE, KERNERSVILLE NC 27284

www.libertygardenproducts.com