




648-KD, 649-KD Hose Stand Assembly Instructions

Assembly Instructions:



1. Insert the female tube into the male tube, align the two holes.
2. Fasten the two supplied Phillips Head Screws into the two threaded holes securely using a Phillips Head Screwdriver.

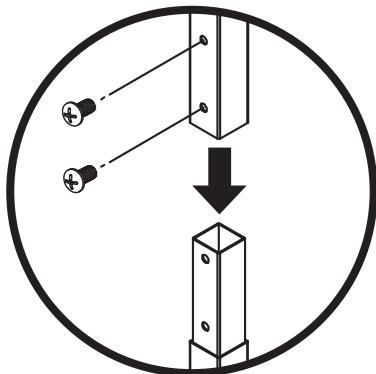


Note:
Do not overtighten Phillips Head Screws to avoid possible stripping.

3. Step down on the single bar until desired depth is achieved.



DO NOT HAMMER or beat unit into position this will damage the cross bar. In hard or rocky soils drill or dig hole depth and width as required. Water down to compact earth. Concrete may also be used for permanent placement.

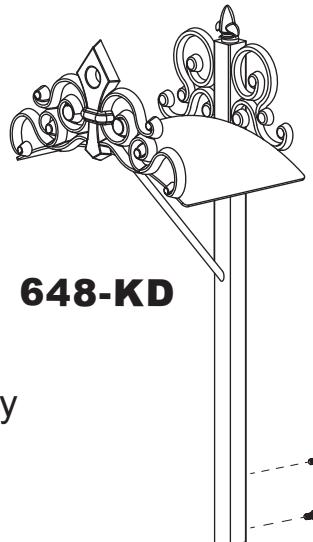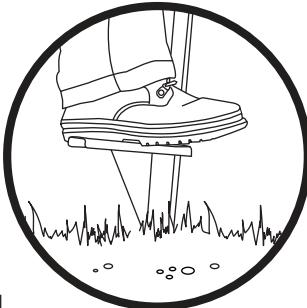

648-KD

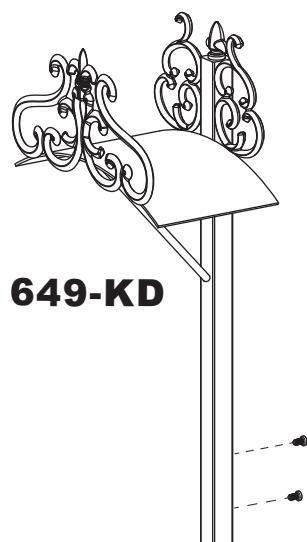

649-KD

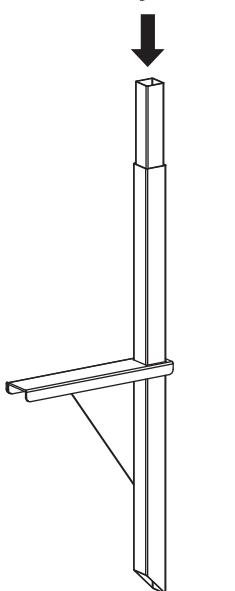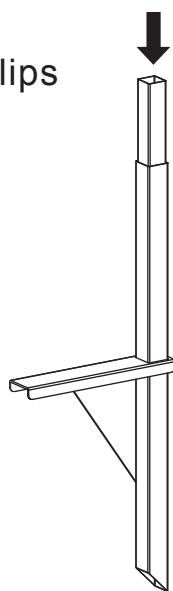

FOR QUESTIONS CONTACT: CUSTOMERSERVICE@LIBERTYGARDENPRODUCTS.COM

LIBERTY GARDEN PRODUCTS, INC.

1161 SOUTH PARK DRIVE, KERNERSVILLE NC 27284

www.libertygardenproducts.com