


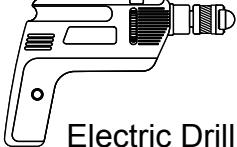
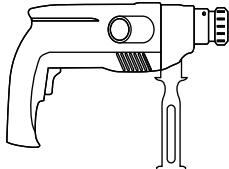
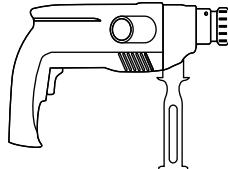
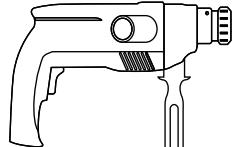





### Liberty Garden Mounting Hardware Reference Chart

Required Tools and Washers	Wood Screw	Brick or Masonry Screw	Brick or Masonry Anchor
	 5/16 " x 2 1/2 " Long	 5/16 " x 2 1/2 " Long	 5/16 " x 2 1/2 " Long
			
			
Wood Drill Bit			
Masonry Drill Bit	 <b>1/4" Pilot Hole</b>	 <b>1/4" Pilot Hole</b>	 <b>5/16" Pilot Hole</b>
Lock Washer			
Flat Washer			

**CAUTION:** The minimum required insertion depth of a brick or masonry anchor sleeve is 1 inch. Ensure the drill hole is deeper than the depth of the sleeve once the anchor is inserted. This will prevent the wall mounted garden product from falling.

**Note:** Drill hole diameters may vary based on anchor sleeves, concrete screws and wood screw manufacturer.

**Check product recommendations before drilling holes**