



NAVIGATOR

ROTATING HOSE REEL Replacement Pin Instruction Manual

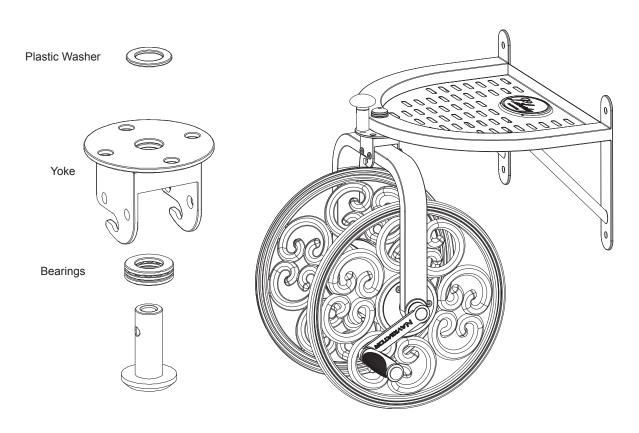


PARTS INCLUDED IN KIT




Watch our Instructional Video at www.libertygardenproducts.com

IMPORTANT: If any of the parts shown are not included in this kit, call Liberty Garden Products at 1-866-820-5805 or send an email to **customerservice@libertygardenproducts.com**

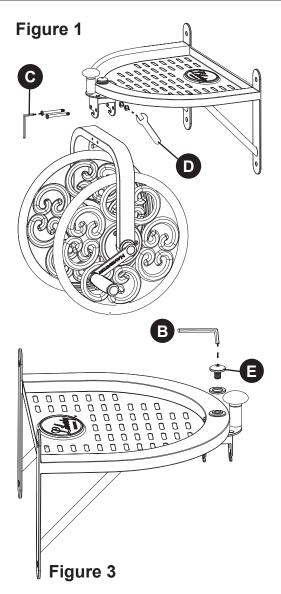


1. First, remove Spool from Yoke by using supplied 4 mm Allen Wrench (C) to hold Allen Bolts in place while using supplied Wrench (D) to remove Lock Nuts. Remove Allen Bolts from holes. To remove Spool from Yoke, lift the Spool upward, then guide it out of small slot on Yoke. Set Spool on ground. See Figure 1.

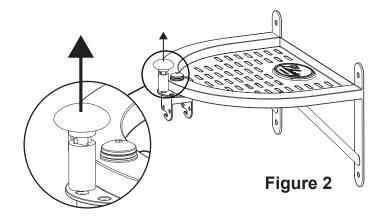


2. Pull up on Locking Pin until Yoke moves freely. **See Figure 2.**


3. Using supplied 5 mm Allen Wrench (B), unscrew Large Allen Screw (E) from Base Shelf. **See Figure 3.**


4. Using supplied 4 mm Allen Wrench (C), unscrew Small Allen Screw (F) from Base Shelf. **See Figure 4.**

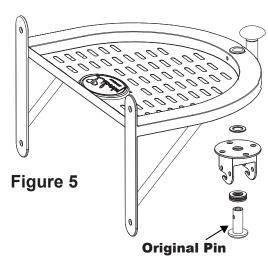

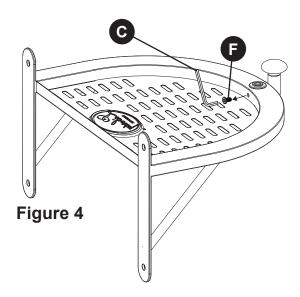

 Remove Plastic Washer, Yoke, Bearings, and Original Pin.
 See Figure 5. 6. After replacing the Original Pin with the Replacement Pin (A), replace Bearings on Pin and slide it through Yoke. Place Plastic Washer over Pin. **See Figure 6.**

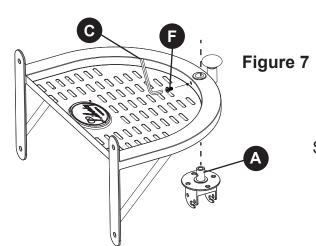

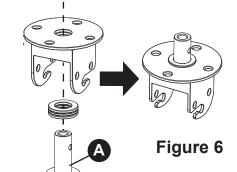

7. Align hole in Replacement Pin (A) with hole in Base Shelf. Insert Small Allen Screw (F) into Base Shelf hole, as shown, and turn with 4 mm Allen Wrench (C) until it catches the Replacement Pin hole.


Do Not Tighten Small Allen Screw Yet.See Figure 7.


8. Screw Large Allen Screw (E) through Washer and into hole using supplied 5 mm Allen Wrench (B).

Tighten securely; be certain that Screw and Washer are flat against Base Shelf.

Then, tighten Small Allen Screw (F) with supplied 4 mm Allen Wrench (C). **Tighten Securely.**

See Figure 8.

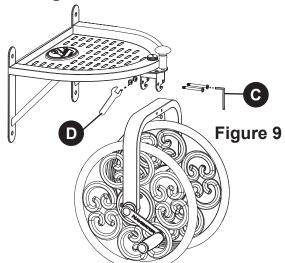

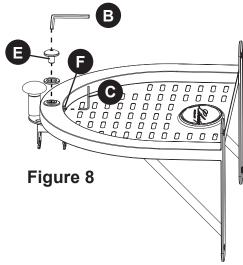

9. Replace Spool onto Yoke. Slide Allen Bolts into holes. Use supplied 4 mm Allen Wrench (C) to hold Allen Bolts in place while using supplied Wrench (D) to tighten Lock Nuts.

See Figure 9.

That's it! Your Navigator is ready for use!

If you have any questions, call us at 1-866-820-5805 or watch our instructional video at www.libertygardenproducts.com

LIBERTY GARDEN PRODUCTS, INC. 1161 SOUTH PARK DRIVE KERNERSVILLE, NC 27284