




Directions for Replacing the O-Rings from Swivels

Take the retaining clip off using snap ring pliers. The swivel comes apart into two pieces. See picture below. Inside you will see two O-Rings. Take those rings off and replace them with new O-Rings. (The O-Rings will slide on easier if you lubricate them first.) Spray the O-Rings with a silicone spray or some type of lubricant. Put the two pieces of the swivel back together and attach a new retaining clip using snap ring pliers.

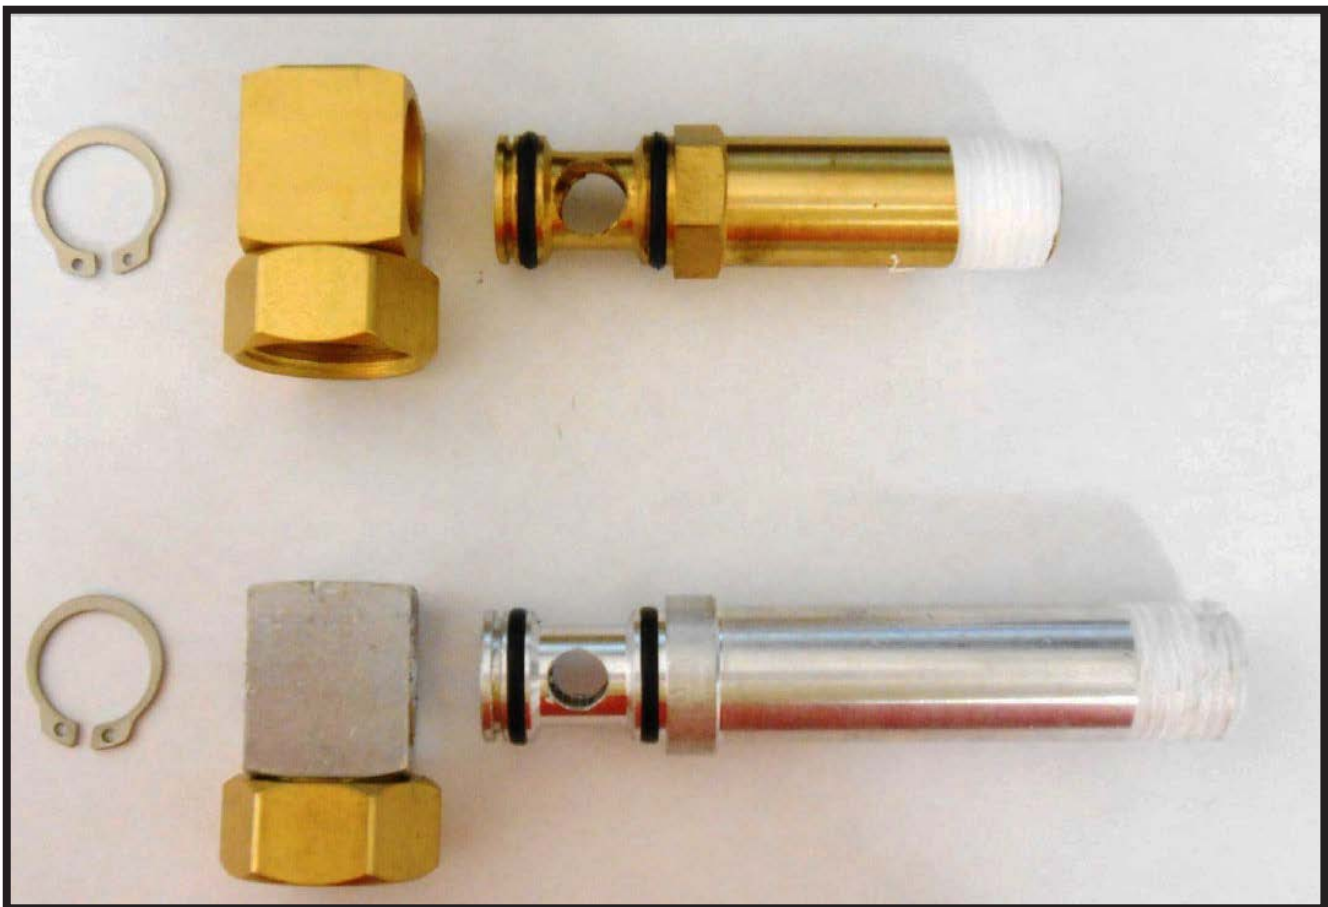

CALL US AT 1-866-820-5805 IF YOU HAVE ANY QUESTIONS REGARDING TROUBLESHOOTING AND WARRANTY