




Multi-Purpose Stainless Steel Hose Reel Owner's Manual

MODEL #709-S2

ATTACH YOUR RECEIPT HERE

Liberty Garden® Products

"Liberty Garden" is a
registered trademark of
Liberty Garden Products, Inc.

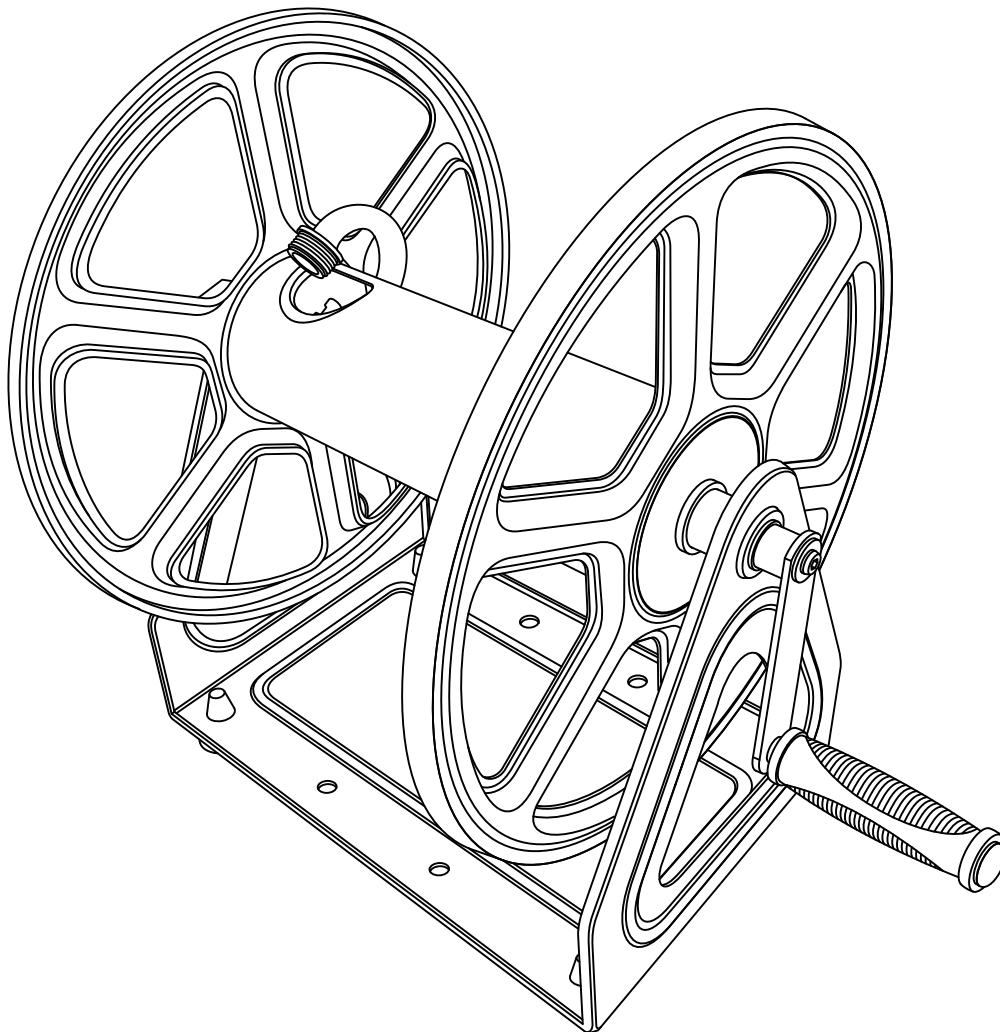

LIBERTY GARDEN PRODUCTS, INC.

1161 SOUTH PARK DRIVE, KERNERSVILLE NC 27284

Questions, problems, missing parts? Before returning the product to your retailer, call our customer service department toll free at 1-866-820-5805, 9 a.m. - 5 p.m., EST, Monday - Friday. You may also contact us at customerservice@libertygardenproducts.com


PRODUCT SPECIFICATIONS

SPECIFICATIONS
200' of 5/8" Hose Capacity
Heavy Gauge Steel Construction
5' Long x 5/8" Leader Hose
90° Brass Swivel
Four 3/8" Mounting Holes
Durable Stainless Steel Finish

SPECIFICATIONS
Model #709-S2 Color: Stainless Steel
No Assembly Required (Attach Crank Handle Only)
Height: 17.63"
Width: 21.88"
Depth: 15"
Weight: 10.3 lbs

PACKAGE CONTENTS

NOTE: Wall mounting hardware is **NOT** included with this unit. Check with a local retailer or visit a hardware store to purchase mounting hardware.

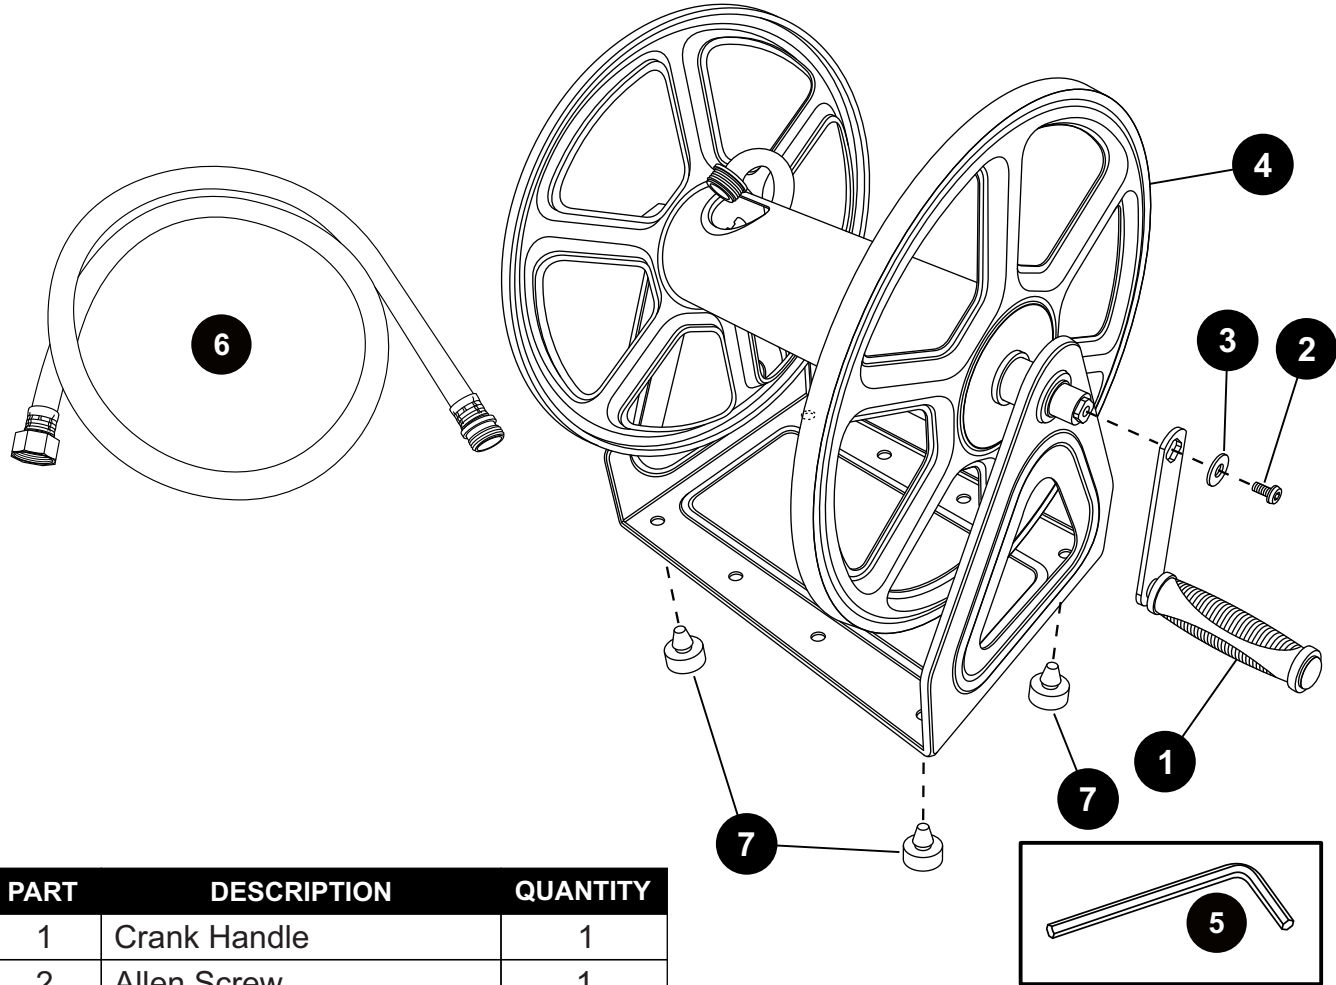

PART	DESCRIPTION	QUANTITY
1	Crank Handle	1
2	Allen Screw	1
3	Flat Washer	1
4	Hose Reel	1
5	Allen Wrench	1
6	Leader Hose	1
7	Rubber Boots	4



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

- **READ ALL INSTRUCTIONS CAREFULLY AND BE SURE THEY ARE FULLY UNDERSTOOD BEFORE USING THE HOSE REEL.**


- **DO NOT** load more than 200 feet of hose onto the reel.
- Distribute the hose evenly over the surface of the drum assembly.
- **DO NOT** exceed maximum water pressure of 125 PSI.
- **DO NOT** expose the unit to freezing temperatures while water remains in the plumbing system. Freezing temperatures can crack the brass swivel causing damage to the unit. Drain water from the hose reel and store indoors during freezing temperatures.
- **DO NOT** leave water running through the hose reel while not in use or unsupervised.
- **DO NOT** consume water from garden hose, it is not rated for human consumption.
- Turn off water source when not in use. Do not leave hose pressurized when not in use.
- If any parts become damaged, broken, or misplaced, do not use the hose reel until the parts have been repaired or replaced.
- **DO NOT** use the hose reel on surfaces that can cause damage to the rubber boots.
- It is recommended that the hose reel be inspected for damage before each use.
- **KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 5 minutes (not including mounting the hose reel).

Tools Required for Assembly (Not Included).

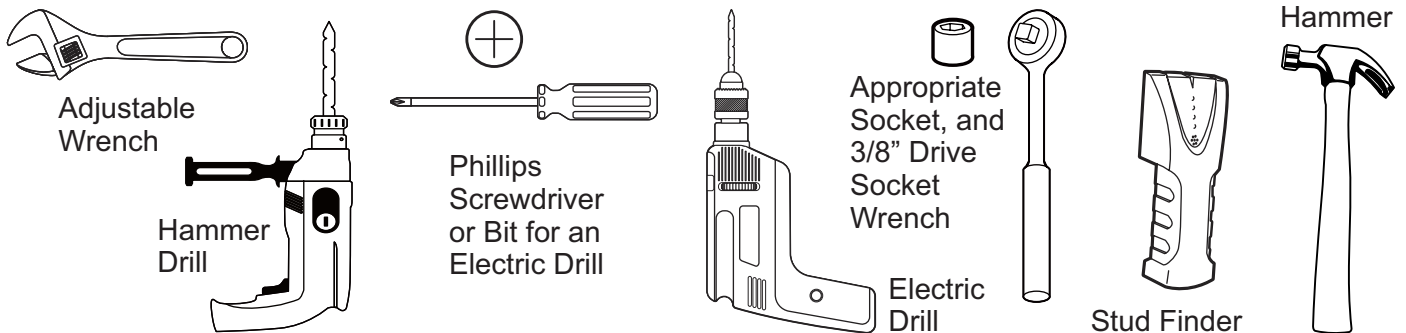


ASSEMBLY INSTRUCTIONS

STEP 1:

Align the key in the crank handle (1) with the reel (4) crank handle shaft. Then, install the flat washer (3) and Allen screw (2) as show in Figure 1.

Using Allen wrench (5), tighten allen screw (2).


NOTE: DO NOT overtighten the Allen screw.

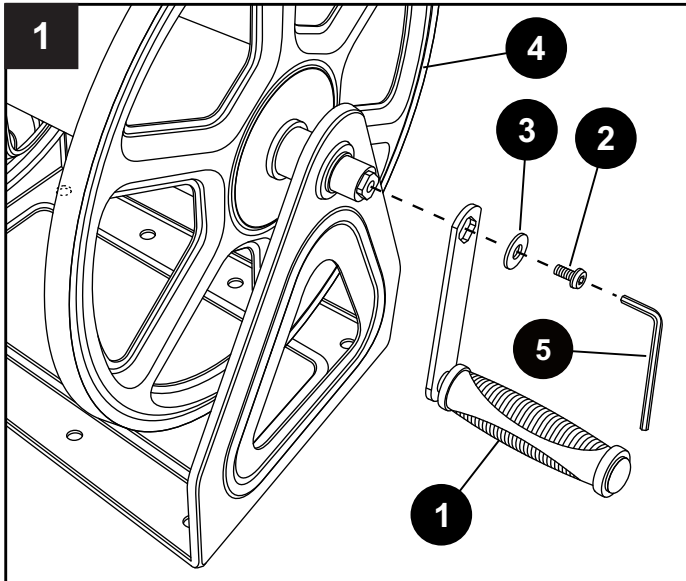

STEP 3:

Attach the garden hose to the hose connector on the reel (4). Using an adjustable wrench, secure the garden hose to the reel. The hose is now ready to wind around the spool.



NOTE: For garden hoses with larger fittings that may not fit on the reel, an optional hose extender may be needed.

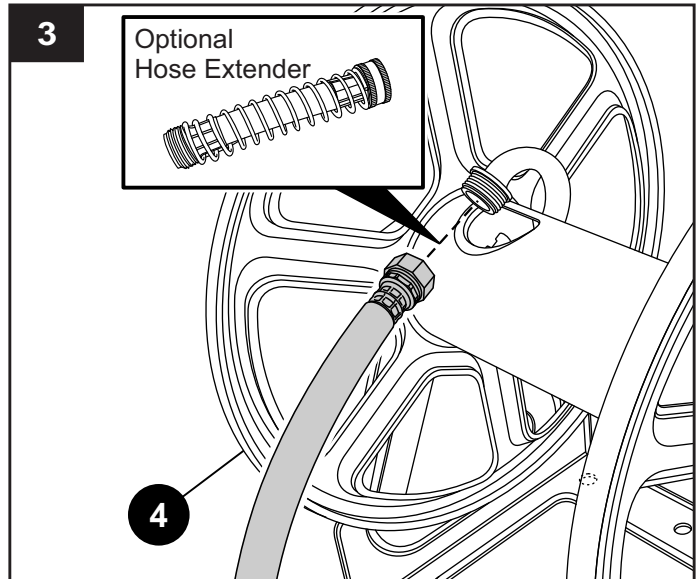

STEP 4: GROUND MOUNTING

Insert the four provided rubber boots (7) into the mounting holes on the hose reel base (4).

NOTE: For easier installation, lubricate the bumpers with water or a light lubricant.

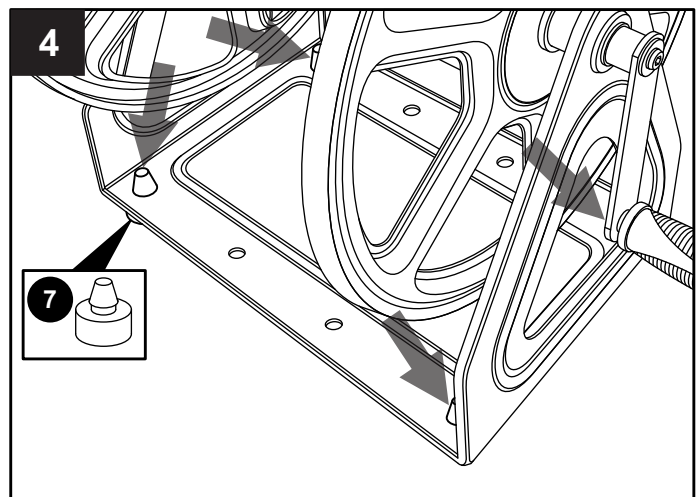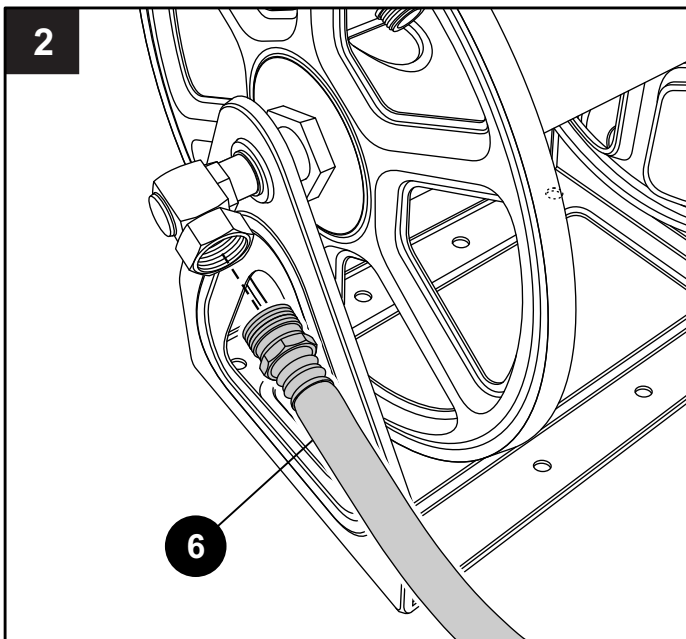

WALL MOUNTING INSTRUCTIONS

NOTE: All wall mounted hose reels must be mounted to a solid masonry wall or to wall studs.

The following mounting hardware is recommended for all hose reel installations, but not included:

- BRICK/MASONRY ANCHOR SLEEVES
- BRICK/MASONRY SCREWS
- WOOD SCREWS

TIP: Remember to use the correct size and quantity of hardware to properly support the total weight of the unit. A standard 100' length of garden hose weighs approximately 15 lbs. Filled with water. The additional weight can exceed 20 lbs. Ensure the mounting hardware will support the combined weight of the unit, garden hose, and water.




Watch the Video

NOTE: Drill hole sizes may vary based on anchor sleeve, or concrete screw manufacturer. Check product and hardware recommendations before drilling holes.

1: BRICK/MASONRY ANCHOR SLEEVE MOUNTING INSTRUCTIONS


NOTE: The anchor sleeve are pre-assembled with the flat washer, lock washer and nut.



5/16 x 2 1/2" Masonry Anchor Sleeve x 4



Flat Washer x 4



Lock Washer x 4



Nuts x 4

- Position and hold the hose reel (4) against the brick or masonry wall at a convenient height. Mark the position of each suspension hole on the wall.

- Remove the hose reel (4).

- Using a hammer drill, drill four 5/16" diameter holes at the marked positions on the wall.

NOTE: Ensure you drill the holes deep enough per anchor sleeve manufacturers specifications.


- Insert the masonry anchor sleeves (A) into the drilled holes on the wall.

- With a hammer, lightly tap the masonry wall anchors (A) until they are fully seated in the wall.

- Position the hose reel (4) on the masonry wall anchors.

- Install a flat washer (B), a Lock washer (C) and nut (D) over each masonry anchor sleeve.

- Using an appropriate socket and 3/8" drive socket wrench, or use an electric drill and nut driver to tighten the mounting hardware and secure the hose reel to the wall.

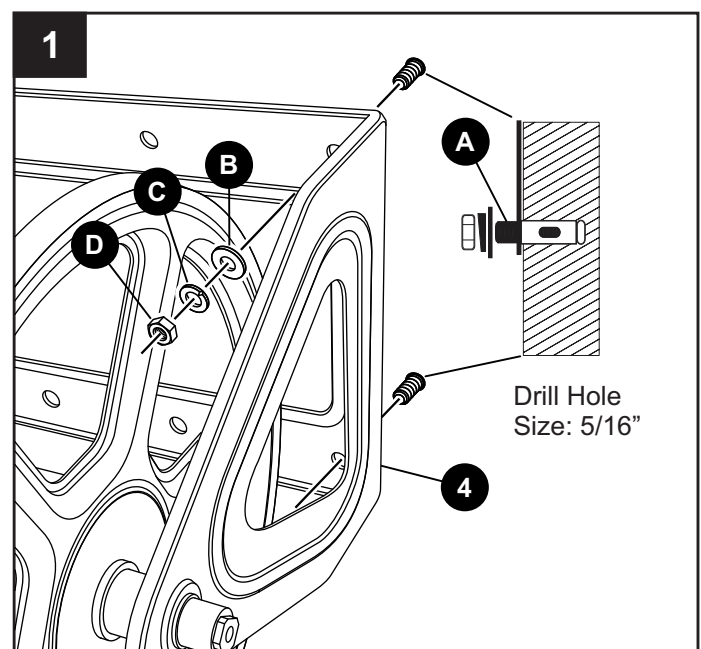

INSTALLATION INSTRUCTIONS

2: BRICK/MASONRY SCREW MOUNTING INSTRUCTIONS



5/16" x 2 1/2" Brick/Masonry Screw x 4




5/16" Flat Washer x 4

- Position and hold the hose reel **(3)** against the brick/masonry wall at a convenient height. Mark the position of each suspension hole on the wall.
- Remove the hose reel **(4)**.
- Using a hammer drill, drill four 1/4" diameter holes at the marked positions on the wall.

NOTE: Ensure you drill the holes deep enough per brick/masonry screw manufacturers specifications.

- Align the hose reel suspension holes with the pilot holes.
- Using four 5/16" x 2 1/2" brick/masonry screws **(A)**, and four 5/16" flat washers **(B)**, to secure the hose reel to the brick/masonry wall. Tighten the screws with a 3/8" socket and 3/8" drive socket wrench or use an electric drill and nut driver.

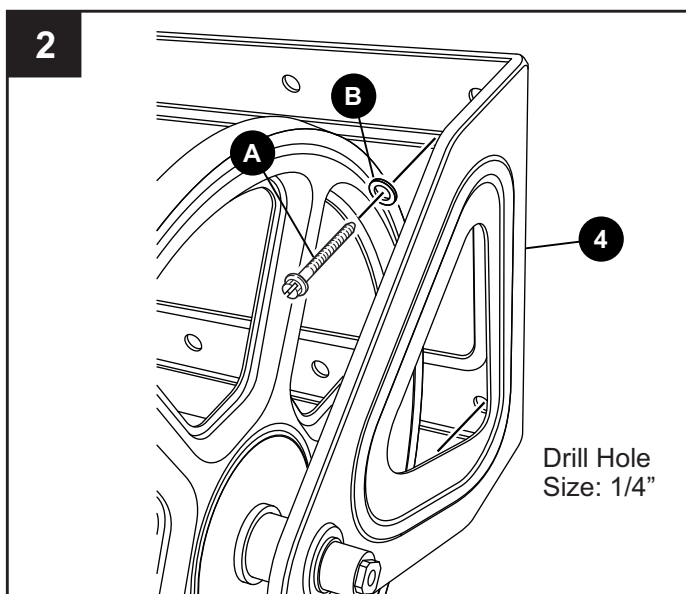

3: WOOD SCREW MOUNTING INSTRUCTIONS




5/16" x 2 1/2" Wood Screw x 4



5/16" Flat Washer x 4

- Using a stud finder, locate the wood studs in the wall.
- Position and hold the hose reel **(4)** against the wood wall/wood post at a convenient height. Mark the position of each suspension hole on the wall.
- Remove the hose reel **(4)**.
- Using an electric drill, drill four 3/16" diameter pilot holes at the marked positions on the wall.
- Align the hose reel suspension holes with the pilot holes.
- Using four 5/16" x 2 1/2" wood screws **(A)**, and two 5/16" flat washers **(B)**, secure the hose reel to the wall. Tighten the screws with a 1/2" socket and 3/8" drive socket wrench or use an electric drill and nut driver.

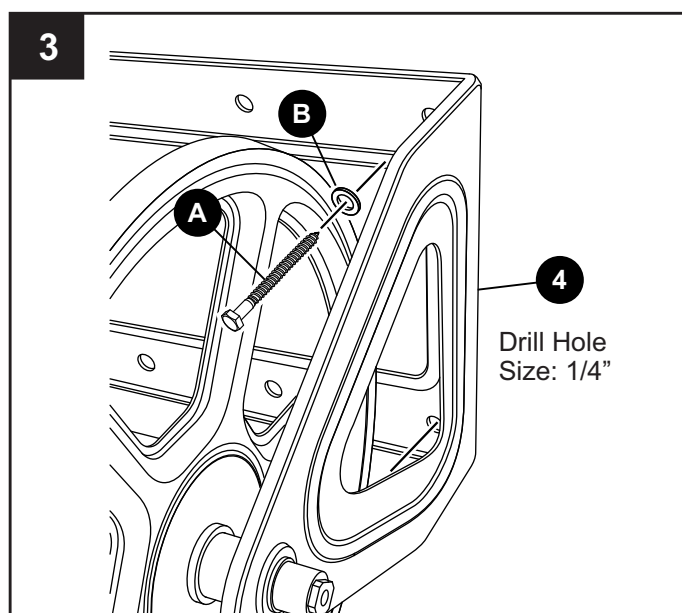

CARE AND MAINTENANCE

Rust

Your hose reel will give you many years of reliable and functional hose storage. However, with any stainless steel product there is a chance for corrosion or surface pitting to develop during exposure to temperature extremes, strong chlorides, or strong acids. Minor surface damage may occur during shipping, assembly, or during installation. If any base metal is exposed clean and treat immediately with a stainless steel protective spray. Additionally, rust acceleration can be caused by exposing the hose reel to yard fertilizers.

It is highly recommended that you periodically inspect your hose reel for minor scratches and clean.

Inspecting the hose reel after each season and protecting the finish will help prevent corrosion and prolong the life of the product. Store the product indoors before winter and consider a cover for your hose reel.

Leaks

Your hose reel is manufactured with the finest quality components available. All components are manufactured to rigorous quality standards not common in other consumer grade hose reel available today. When you assemble your hose reel, be sure the hose washers are in place and all fittings are secure. **DO NOT OVER TIGHTEN** as you might damage the components. If you live in more temperate climates, be sure to drain the unit of any residual water before storing. **DO NOT EXPOSE THE UNIT TO FREEZING TEMPERATURES** while water remains in the plumbing system.

- Ensure the hose washers are in place.
- Ensure all fittings are secure and tight.
- Check the head of the brass swivel for damage if the unit has been exposed to freezing temperatures.
- The brass swivel uses two rubber O-Rings which over time can wear out. Replacement O-Rings can be found at our website: www.libertygardenproducts.com

TROUBLESHOOTING

Problem: Your new hose reel is leaking at the brass swivel.

Solution: It is normal for the brass swivel to leak slightly until the O-Rings are wet and have seated. If the leaking continues, you do not need to take the hose reel back to the store. This is a simple problem and is easily fixed by following the troubleshooting procedures outlined on page 8.

Problem: The brass swivel head is not rotating, causing the leader hose to kink.


Solution: Remove leader hose and turn the square head of the brass swivel several times and apply silicone lubricant.

Problem: Leaking Fixtures (brass tee; brass coupling; swivel)

Solution: Apply Teflon/Plumber's Tape to the threads on the brass swivel shaft and ensure the fixtures are tight.

TROUBLESHOOTING (continued)

1. If the leader hose is attached to the brass swivel, unscrew the hose and look inside the swivel.
2. Using either a 3/8" hex key or a large screw driver, insert the tool into the hex opening and gently tighten the threaded insert. **DO NOT OVER TIGHTEN!**
3. This should stop the leaking.
4. If the unit still leaks, please ensure the hose washer is inside the nut. You may contact Liberty Garden for a new hose washer or obtain one at any local hardware store.
5. If the brass swivel is old, the O-Rings may be worn, please contact Liberty Garden for a new set of O-Rings.
6. If these steps do not solve the leak problem, contact Liberty Garden.

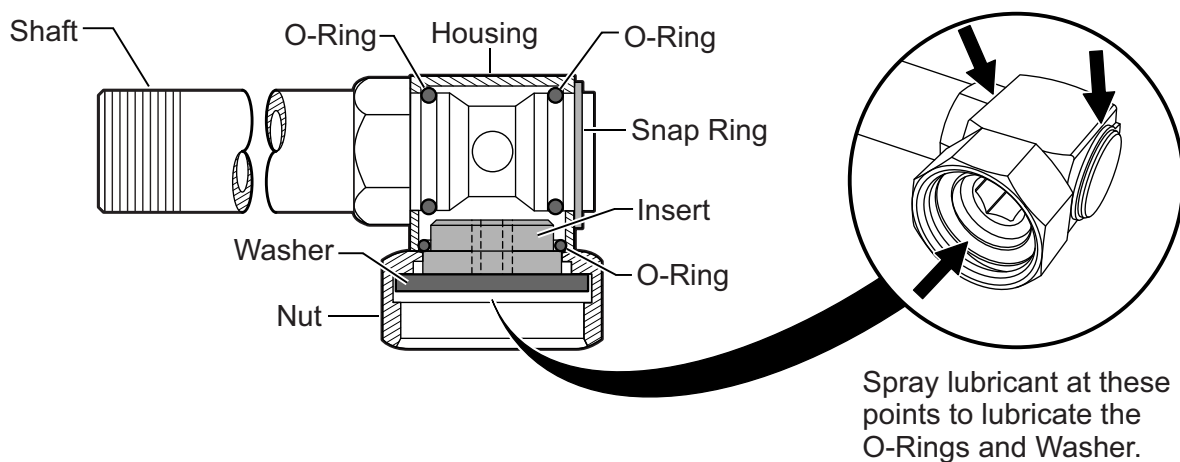

LIBERTY GARDEN PRODUCTS LIMITED WARRANTY

(Effective December 05, 2023)

This limited warranty is applicable to each original end-customer (hereinafter "Customer") purchasing the model 709-S2 Multi-Purpose hose reel consisting of the structural metal frame and spool (hereinafter the "Structural Frame") and various other non-frame components (hereinafter the "Non-Frame Parts") sold by Liberty Garden Products, Inc. (hereinafter "Company") for Customer's own use and not for resale. The Structural Frame and Non-Frame Parts are collectively referred to herein as the "Products".

1. LIMITED WARRANTY; EXCLUSIVE REMEDIES:

1.1. LIMITED WARRANTY ON PRODUCTS: Company warrants solely to the original Customer that (a) the Structural Frame will be free from defects in materials and workmanship under normal use for a period of three (3) YEAR(S) from the date of original retail purchase, and (b) the Non-Frame Parts (which consist of the crank handle, swivel and water connections, leader hose and tires), will be free from defects in materials and workmanship under normal use for a period of ONE (1) YEARS from the date of original retail purchase. Notwithstanding the foregoing, the colors and finishes of the Products may vary within a reasonable scope due to unavoidable color variations in different production batches, and such variations shall not constitute a material defect. This limited warranty is limited solely to the original Customer with proof of purchase and is not transferable.

1.2. THE WARRANTY: During a covered Product's limited warranty period, Company will, at Company's sole option and discretion, (1) repair the defective component or product without charge or (2) replace the defective component or product without charge.

LIBERTY GARDEN PRODUCTS LIMITED WARRANTY (continued)

1.3. The foregoing limited warranty is subject to the Customer's proper storage, transportation, handling and use of the Products as the same are defined within Company's then-current published guides and instructions for use and care. The limited warranty does not include defects due to normal wear and tear, abuse or misuse, mishandling, neglect, accident, fire, lightning, sunlight or other natural hazard, delivery or transportation damage, failure to follow applicable directions or instructions, or improper or inadequate cleaning, maintenance, care, repairs, modifications, or use beyond a Product's intended use. Please note that since the Structural Frame is made from steel rust may occur over time. As such, this limited warranty does not include rust or defects due to the same.

1.4. LIMITED WARRANTY CLAIMS PROCEDURE: To obtain performance under this limited warranty, Customer shall notify Company in writing (to Liberty Garden Products, Inc., 1161 South Park Drive, Kernersville, NC 27284, Attn: Customer Service / Warranty Department), by email (to customerservice@libertygardenproducts.com), or by telephone (to (336) 992-3595) with a full description of the defect that is covered by warranty and a copy of the dated proof of purchase of the applicable product.

- Company shall review each such claim and issue Customer a return merchandise authorization ("RMA") in the event that the described defect or condition merits warranty review as determined by Company. Customers who have been issued a RMA shall, at Company's election, return the covered item to the same physical address listed above for reporting initial claims. Company shall not accept any returned product without a RMA.
- Upon receipt, Company will evaluate the returned product(s) to determine if there is a warranty claim and, if so, how Company wishes to remedy the same. During a covered product's respective limited warranty period, Company will, at Company's sole and absolute option and discretion, (1) repair the defective component or product without charge or (2) replace the defective component or product without charge. Refunds are not available pursuant to this limited warranty.
- Customer is solely responsible for transportation of the covered product(s) to the Company for evaluation (if applicable and requested by Company). In the event that Company determines that a claim under this limited warranty is justified, Company shall be responsible for transportation of the repaired, corrected, replaced or exchanged product back to Customer. Customer shall be solely responsible for the transportation of any product back to Customer if Company determines that a claim under this warranty is not justified.
- Any repaired, corrected, replaced or exchanged Products shall be subject to the Limited Warranty set forth to the duration of the original limited warranty period as set forth in Section 1.1. and not for any extended duration, following their repair, correction, replacement or exchange.

1.5. IF A COMPANY PRODUCT DOES NOT CONFORM TO THESE LIMITED WARRANTIES, THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY IS, AT COMPANY'S SOLE AND EXCLUSIVE OPTION, THE (1) REPAIR OF ANY DEFECTIVE PRODUCT OR COMPONENT PART OR (2) REPLACEMENT OF ANY DEFECTIVE PRODUCT OR COMPONENT PART. THE LIMITED WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND MADE IN LIEU OF ALL OTHER WARRANTIES, REMEDIES, RIGHTS OR CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. COMPANY SPECIFICALLY DISCLAIMS, WITHOUT LIMITATION, ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, OF ANY KIND. IF COMPANY CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS LIMITED WARRANTY. The Company does not assume or authorize any person to assume for them any other liability in connection with the Products.

LIBERTY GARDEN PRODUCTS LIMITED WARRANTY (continued)

2. EXCLUSION AND LIMITATION OF LIABILITY:

IN NO EVENT, WHETHER BASED ON CONTRACT OR TORT OR OTHER LEGAL THEORY, SHALL COMPANY BE LIABLE FOR ANY INDIRECT, INCIDENTAL, PUNITIVE, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO, DAMAGES TO OTHER PROPERTY, INCONVENIENCE, DAMAGES FOR LOSS OF PROFITS, REVENUE, GOODWILL OR USE, INCURRED BY CUSTOMER OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT, TORT, STRICT LIABILITY, OR IMPOSED BY STATUTE, OR OTHERWISE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages or exclusions or limitations on the duration of implied warranties or conditions, so the above limitations or exclusions may not apply to Customer. In jurisdictions that limit the scope of or preclude limitations or exclusion of remedies or damages, or of liability, such as liability for gross negligence or willful misconduct or do not allow implied warranties to be excluded, the limitation or exclusion of warranties, remedies, damages or liability set forth above are intended to apply to the maximum extent permitted by applicable law. This limited warranty gives the Customer specific legal rights, and the Customer may also have other rights that vary by state, country or other jurisdiction.

3. SEVERABILITY:


If any provision of this limited warranty is held to be illegal, invalid or otherwise unenforceable, such provision will be enforced to the extent possible consistent with its stated intention, or, if incapable of such enforcement, will be deemed to be severed and deleted from this limited warranty, while the remainder of the terms of this limited warranty will continue in full force and effect.

4. DISPUTE RESOLUTION:

This Liberty Garden Products, Inc. Limited Warranty shall be governed by and construed in accordance with the laws of the State of North Carolina, without regard to its principles of conflicts of law. The parties acknowledge the exclusive jurisdiction of the federal and state courts of the State of North Carolina. Any claims or disputes under this Liberty Garden Products, Inc. Limited Warranty shall be heard exclusively in any state or federal courts sitting in Guilford County, North Carolina, and both parties expressly consent to the personal jurisdiction and venue of the North Carolina state and federal courts for such actions

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department toll free at 1-866-820-5805, 9 a.m. - 5 p.m., EST, Monday - Friday. You may also contact us at customerservice@libertygardenproducts.com

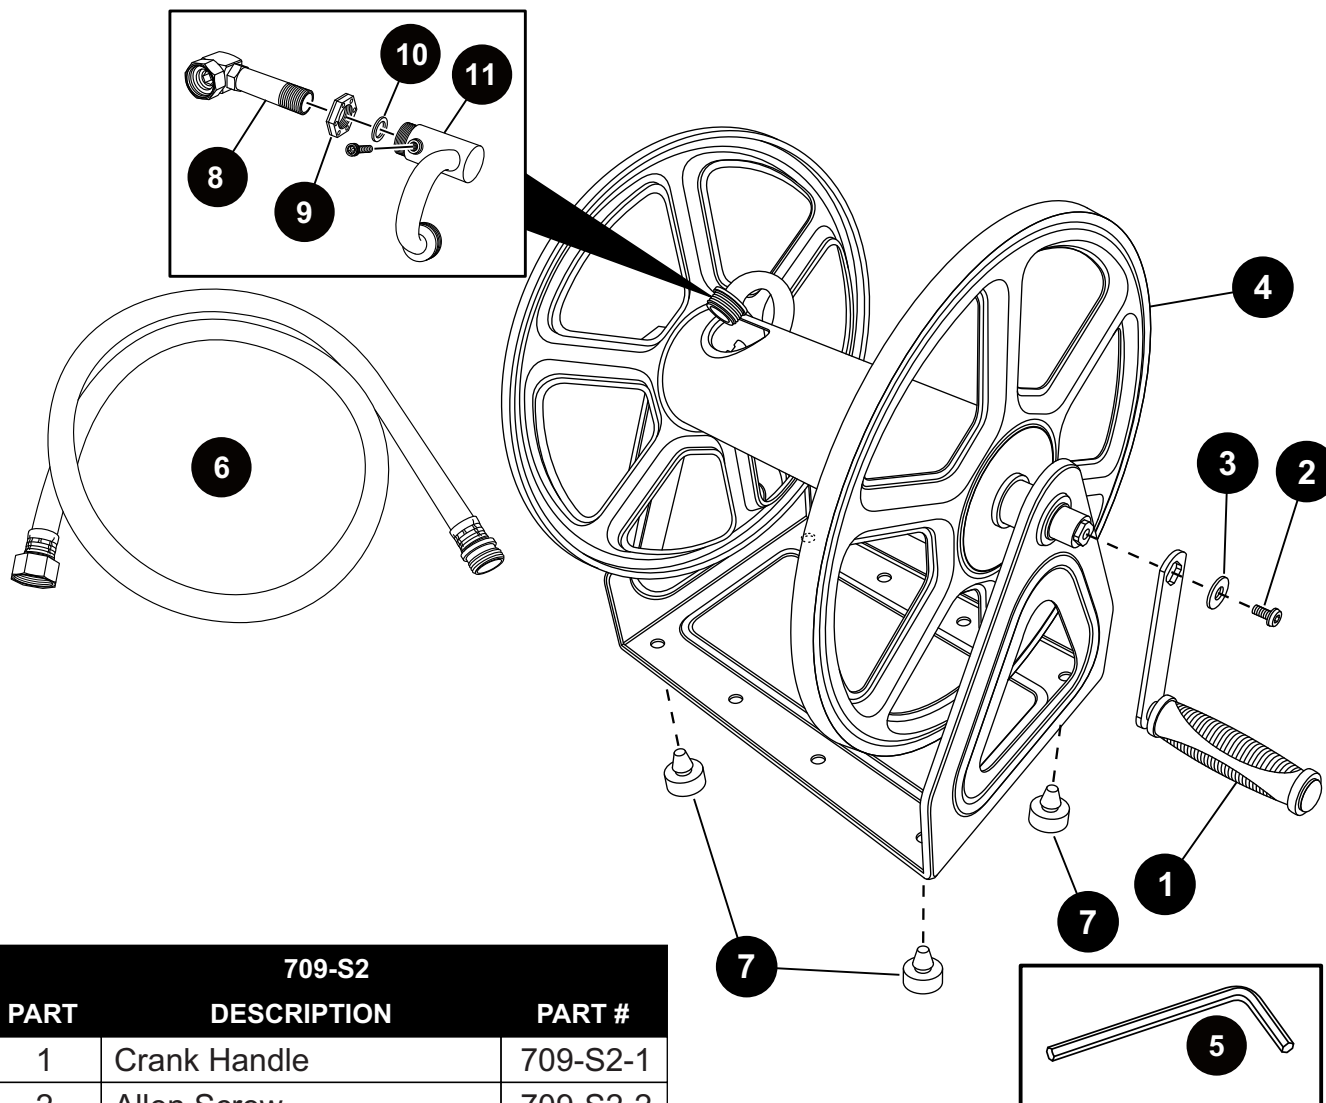

709-S2		
PART	DESCRIPTION	PART #
1	Crank Handle	709-S2-1
2	Allen Screw	709-S2-2
3	Flat Washer	709-S2-3
4	Hose Reel	709-S2-4
5	Allen Wrench	709-S2-5
6	Leader Hose	709-S2-6
7	Rubber Boots	709-S2-7
8	Brass Swivel	709-S2-8
9	Elbow Nut	709-S2-9
10	Elbow Washer	709-S2-10
11	Water Elbow	709-S2-11



Liberty Garden Products

© 2023 Liberty Garden Products, Inc. All Rights Reserved, Kernersville, NC

Updated 12/05/2023